


Block ATT

The ATT block divides its input by its parameter.

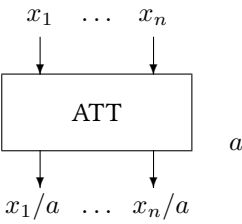

Name	ATT
Function	fb0006
Inputs	1 ... [10]
Outputs	1 ... [10]
Parameters	1
Strings	0
Group	S

Inputs

i Any value x_i

Outputs

i Quotient of input and parameter x_i/a

Parameters

1 Attenuation factor $a \neq 0$

Strings

None

att.vseit



A [CONST](#) block with value 1 is used and attenuated by a factor 3.14. A [SCREEN](#) block displays the result 0.3185.