

Block MBE

The MBE block calculates the mean bias error between the input signals over a complete simulation run.



Name	MBE
Function	fb0075
Inputs	2
Outputs	1
Parameters	0
Strings	0
Group	I

Inputs

- 1 Simulated time series x_s
- 2 Measured time series x_m

Outputs

- 1 Mean bias error

Parameters

None

Strings

None