


Block NOW

The NOW block returns the current date and time from the operating system.

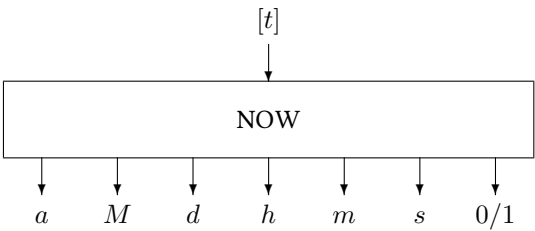

Name	NOW
Function	fb0050
Inputs	0 ... [1]
Outputs	7
Parameters	0
Strings	0
Group	S

Inputs

- 1
- Any predecessor

Outputs

- 1
- Current year
- 2
- Current month
- 3
- Current day
- 4
- Current hour
- 5
- Current minute
- 6
- Current second
- 7
- Daylight saving time


Parameters

None

Strings

None

now.vseit

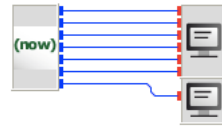

The **NOW** block provides the current date, time and daylight-saving-time indicator which are displayed by two **SCREEN** blocks.

```
2013.000    9.000    21.000    13.000    14.000    36.201
1.
```

Of course, the output depends on the moment when the program is executed.