

## Block PCNTRL

The PCNTRL block...



DUMMY

---

|                   |        |
|-------------------|--------|
| <b>Name</b>       | PCNTRL |
| <b>Function</b>   | pp0017 |
| <b>Inputs</b>     | 3      |
| <b>Outputs</b>    | 1      |
| <b>Parameters</b> | 5      |
| <b>Strings</b>    | 0      |
| <b>Group</b>      | L      |

---

### Inputs

- 1 Storage content
- 2 Former mass flow mp
- 3 Storage outlet temperature Tout

### Outputs

- 1 Mass flow for power plant

### Parameters

- 1 Intial value for INITOL (OLD!!!!)
- 2 mp value
- 3 Cut in setpoint
- 4 Cut off setpoint
- 5 Switch off temperature setpoint

### Strings

None

### Remarks

---