


Block NOW

The NOW block returns the current date and time from the operating system.

(now)

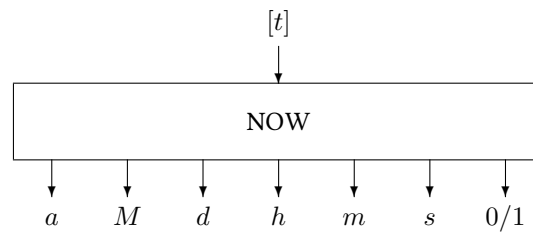

Name	NOW
Function	fb0050
Inputs	0 ... [1]
Outputs	7
Parameters	0
Strings	0
Group	S

Inputs

- | | |
|---|-----------------|
| 1 | Any predecessor |
|---|-----------------|

Outputs

- | | |
|---|----------------------|
| 1 | Current year |
| 2 | Current month |
| 3 | Current day |
| 4 | Current hour |
| 5 | Current minute |
| 6 | Current second |
| 7 | Daylight saving time |


Parameters

None

Strings

None

now.vseit

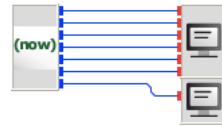

The **NOW** block provides the current date, time and daylight-saving-time indicator which are displayed by two **SCREEN** blocks.

```
2013.000      9.000      21.000      13.000      14.000      36.201
1.
```

Of course, the output depends on the moment when the program is executed.