

Block PCNTRL

The PCNTRL block...



DUMMY

Name	PCNTRL
Function	pp0017
Inputs	3
Outputs	1
Parameters	5
Strings	0
Group	L

Inputs

- 1 Storage content
- 2 Former mass flow mp
- 3 Storage outlet temperature Tout

Outputs

- 1 Mass flow for power plant

Parameters

- 1 Intial value for INITOL (OLD!!!!)
- 2 mp value
- 3 Cut in setpoint
- 4 Cut off setpoint
- 5 Switch off temperature setpoint

Strings

None

Remarks
