


Block RMSE

The RMSE block calculates the root mean square error between the input signals over a complete simulation run.

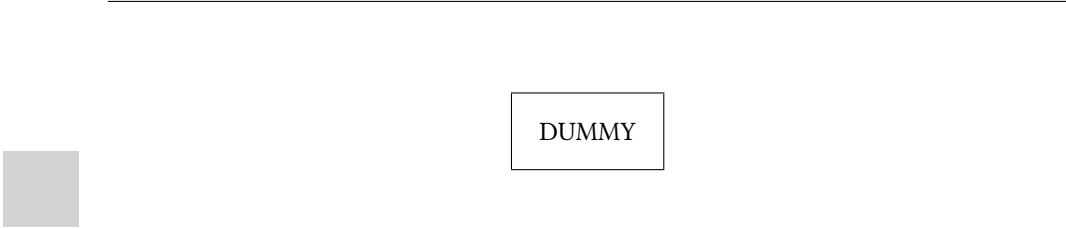

Name	RMSE
Function	fb0075
Inputs	2
Outputs	1
Parameters	0
Strings	0
Group	I

Inputs

- 1 Simulated time series x_s
- 2 Measured time series x_m

Outputs

- 1 Root mean square error

Parameters

None

Strings

None