
Block NOW

The NOW block returns the current date and time from the operating system.

now

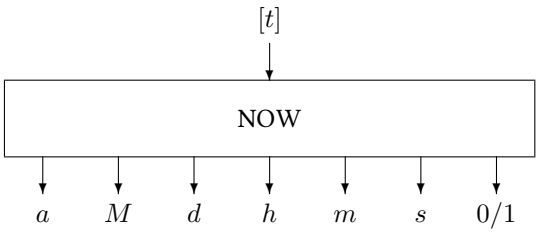

Name	NOW
Function	fb0050
Inputs	0 . . . [1]
Outputs	7
Parameters	0
Strings	0
Group	S

Inputs

1	Any predecessor

Outputs

1	Current year
2	Current month
3	Current day
4	Current hour
5	Current minute
6	Current second
7	Daylight saving time


Parameters

None

Strings

None

now.vseit

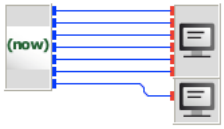

The NOW block provides the current date, time and daylight-saving-time indicator which are displayed by two SCREEN blocks.

```
2013.000      9.000     21.000     13.000     14.000     36.201
  1.
```

Of course, the output depends on the moment when the program is executed.