
Block ATEND

The ATEND block executes its successors at the end of a simulation run only.

@end

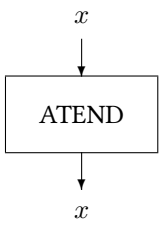

Name	ATEND
Function	fb0045
Inputs	1 . . . [50]
Outputs	1 . . . [50]
Parameters	0
Strings	0
Group	I

Inputs

1 Any signal x

Outputs

1 Signal x is transported only at the end of a simulation run

Parameters

None

Strings

None

atend.vseit



In a DO block numbers are counted from 1 to 10. The result is filtered through the ATEND block. As a result the last output of the DO block is then displayed by the SCREEN block.

```
10.0 10.0
```